

## Latex Wallpaper mural - installation instruction

**Attention:** Please check the product carefully after unpacking (dimensions, number of parts, matching of parts, laminate, graphic quality). After the installation, no complaints will be accepted.

### How to hang Latex mural - Instruction

Immediately after unpacking the mural you should place the prints on a smooth, clean and dry surface. When it consists of more than one panel, all elements must be rolled out. Please, check whether the print does not contain any factory defaults. Next, roll up the mural and put it aside in a safe place. In order to install mural please feel free to use the services of a professional. If you don't have any experience, there is risk of damaging the mural with inaccurate application.

### Information about the material:



Our murals are printed on PVC coated paper (weight 80 lb. (212gsm) – this is a high-quality matte synthetic paper, dedicated to both: internal and external use. Quality printing i photo-realistic. For preparation of the print we always use the largest available image resolution. Remember that the visualization on your computer screen is not always the same as when you see the picture up close. The best visual effect is achieved by consideration of a mural from a distance greater than 1 m.

### The instruments needed during installation:



mural, glue, 2 large paint brushes or rollers, water level, dry soft cloth, precision knife, small step-ladder.

### Installation instruction:

#### High up to 118 inches

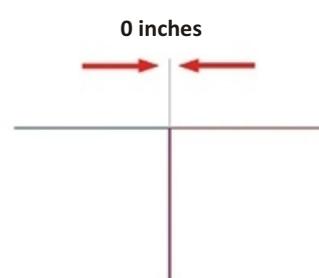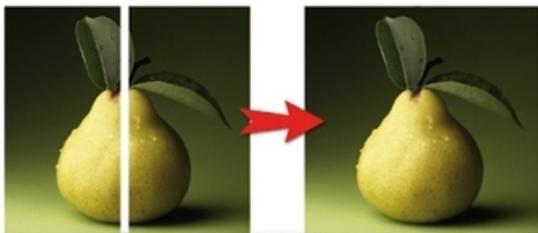

#### In excess of 118 inches

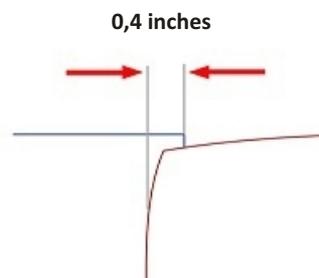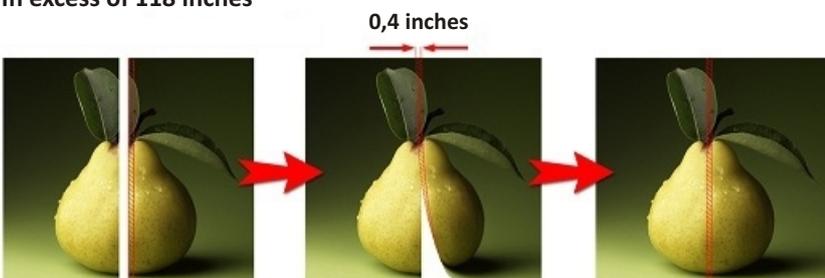

## **1. First step: Preparing the wall**

The wall on which you are placing the murals should be flat and smooth. Please make sure you get rid of any irregularities. It is important to mark the areas where you'll hang the sheets. Mark it very lightly with a pencil. For this purpose, you can use a water level, which will help you to determine the fresh line. The heavier end of the thread must be lowered from the ceiling.

## **2. Hanging the mural**

Please note if you are not going to use the services of a professional get a helper to assist you. To hang the mural you can use any all-purpose wallpaper glue. The glue must be used according to the manufacturer's instructions and recommendations. We recommend Solvite-Extra-Strong all-purpose wallpaper glue. According to the description-it contains fungicide to inhibit mold growth. It is extra strong and can be used on most surfaces like walls, concrete, plaster, wood and tiles. It is easy to slide the wallpaper because of the smooth texture.

**Preparing the mural** – Important! Place the mural with the picture face down on the ground, on a smooth surface – preferably on a clean, dry material (newspapers, etc.). The mural must be spread over the entire surface.

**Priming the wall** - With either brush or roller apply adhesive to the wall in the place where you are going to place the mural. Apply the adhesive evenly, covering the entire area where you'll be placing the first sheet. Make sure to apply the right amount of adhesive according to the type of wall. For thick concrete we use less than, say, the plaster, which is characterized by having a greater absorption. After careful priming the walls, apply adhesive to the first panel of mural, making sure that you evenly cover the whole area when distributing. It is important to thoroughly cover all the edges with glue! Wait for about 3 minutes. During this time, you can wash your hands and prepare a ladder and roller. First attach the top. Never try to hang the mural all at once. Stick the mural by pushing from the top-down. In this way you get rid of air bubbles. Subsequent if there is more than one segment (wallpaper sheets) attached it in such a way that the graphic fit perfectly. This is the most important moment in which you should be careful when joining the images. Mural in excess of 118 inches are printed with an overlap, and they should be glued the same. Evening out the mural. NOTE – Use only reliable tools. Be sure to use a rubber roller for wallpaper. Pressing by cloth or hand could result in an uneven surface or damage the mural. Carefully push the roller and smooth the entire surface. Make sure that the edges are well-stuck to the wall. Sufficient time for pressing the mural is 15-20 minutes for each segment. Gently remove the excess glue with a dry, soft cloth.

In view of the fact that the walls are always breathing and you choose the laminate your mural, it is necessary to use a primer (anti fungal) in the areas where you plan to hang it. In case of persistent moisture walls, low temperatures or inadequate ventilation, priming does not always guarantee the desired result. Mural can be gently wiped with a damp cloth with particular caution. Please familiarize yourself with the adhesive and abrasion resistance.

We would really appreciate photos from your completed project.